



the original since 1921

THE OVERHEAD DOOR COMPANY
OF INDIANAPOLIS AND MUNCIE

WWW.MYOHD.COM

STANLEY / MULTI-CODE

Freq 310 / Freq 300

Model 24718 (298601) / Model 4200



10 dip switch models:
Note the number of each
dip switch in the **ON**
(closed) position

9 dip switch models:
Note the number of each
dip switch in the **ON**
(closed) position, the
keypad will automatically
read switch 10 as off so
don't worry about it.

Code Wire models:
Note the numbers of
each unclipped code
wire.

Press the **RADIO LEARN** button twice.

Enter **1, 2, 3, 4** & your RADIO CODE from the
preceding column & **RADIO LEARN** again

Wait for the flashing lights behind the numbers to
go out

Press the **ACCESS LEARN** button twice **1,2,3,4**
your new PIN No & **ACCESS LEARN**

Wait for the flashing lights behind the numbers to
go out

*To reset the access code only, press **ACCESS LEARN** button twice, your old PIN No, your new PIN No, & **ACCESS LEARN** once*

To reset the keypad to the factory programmed codes, remove the battery from the keypad for about 5 minutes and the keypad will revert to its original factory code