

The Genuine. The Original.



THE OVERHEAD DOOR COMPANY OF INDIANAPOLIS AND MUNCIE

WWW.MYOHD.COM

Reset default setting by pressing **ON/RESET** then
999#,999#

Push **ON/RESET, 1234 * 1**

Select a 4 digit PIN number and enter it here _____

Enter **ON/RESET, 1234, #,1, (PIN No),(PIN No),#**

Find your door code by entering the switch positions
from the inside of your transmitter,
+ = 1, 0 = 2, - = 3

Enter **ON/RESET, (PIN No), ##, 1 (door code)**

To operate your door press **ON/RESET, (PIN), *, 1**

MULTIPLE DOOR INSTRUCTIONS:

It is **NOT** recommended to use this keypad to open
more than one door, but if you must open multiple
doors with this keypad please code door #1 with the
above instructions before attempting to code doors 2
and/or 3

Press **ON/RESET, (PIN No), *, 2** for door number 2
Find your door code by entering the switch positions
from transmitter 2,
+ = 1, 0 = 2, - = 3

Enter **ON/RESET, (PIN No), ##, 2, (door code)**


To operate your door press **ON/RESET, (PIN No), *, 2**

Press **ON/RESET, (PIN No), *, 3** for door number 3
Find your door code by entering the switch positions
from transmitter 3,
+ = 1, 0 = 2, - = 3

Enter **ON/RESET, (PIN No), ##, 2, (door code)**

To operate your door press **ON/RESET, (PIN No), *, 3**

Allister/Pulsar Keypad

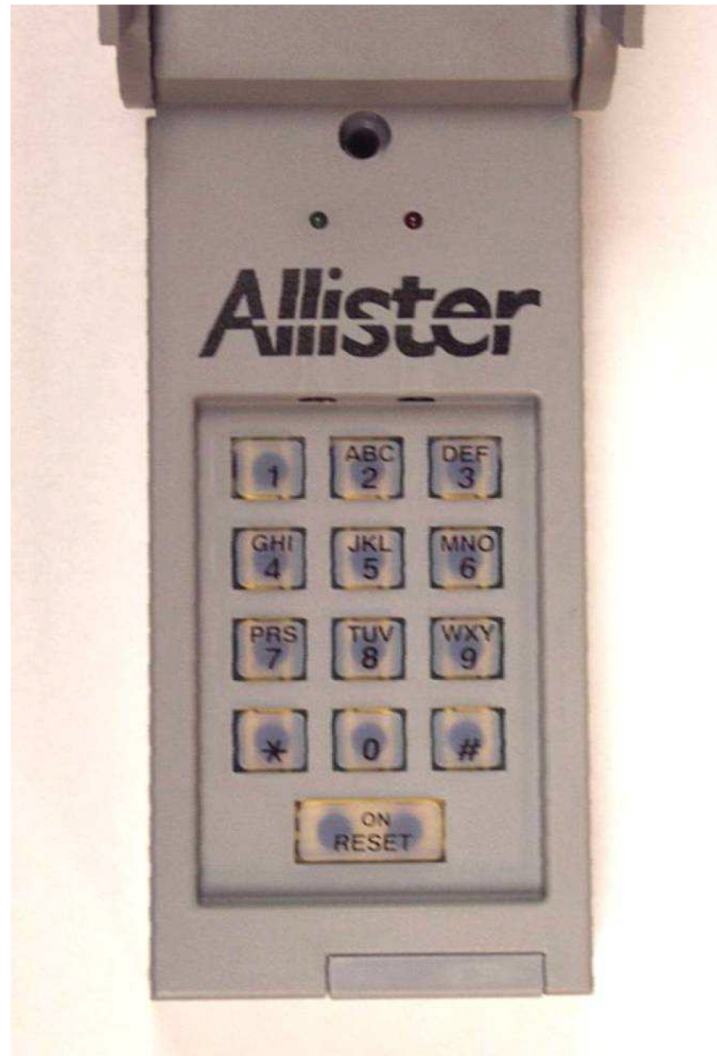

works with these
transmitters

