



# LIFTMASTER WIRELESS KEYPAD

Locate the ANTENNA wire on the back or side of the motor (if your ANTENNA is **PURPLE** look at the 3500 series diagram below, if the ANTENNA is any other color use the 1200 series diagram). Next find the SMART button. The SMART button is used to add and subtract transmitters and keypads.

## CODING INSTRUCTIONS

### TO CLEAR OUT OLD CODES

Press and **HOLD** the **SMART** button for **20 seconds** release the SMART button and try any existing transmitter to make sure the old code is gone.

### TO ADD KEYPAD

Press and **RELEASE** the **SMART** button and immediately go to the Keypad.

Input you 4 digit PIN number and press-

**ENTER** **ENTER** **ENTER** **ENTER**

### TO ADD A TRANSMITTER

 
Press and **RELEASE** the **SMART** button and then press the TRANSMITTER button 4 times slowly

Repeat above step with any remaining transmitters



**LiftMaster**  
**SECURITY+**

**1200 SERIES 390 freq**

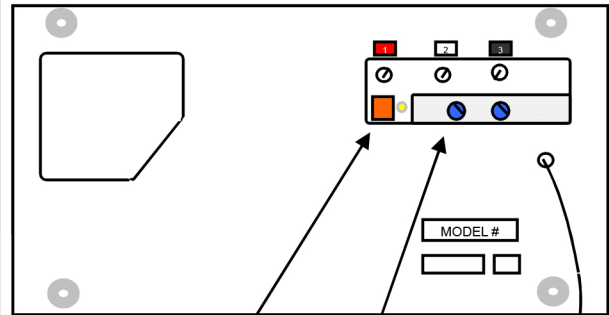

**SET LIMIT**  
**SMART BUTTON**

**GRAY ANTENNA WIRE**

The Genuine. The Original.

 


**THE OVERHEAD DOOR COMPANY  
OF INDIANAPOLIS AND MUNCIE**

**WWW.MYOHD.COM**

**LiftMaster**

**3500 SERIES 315 freq**

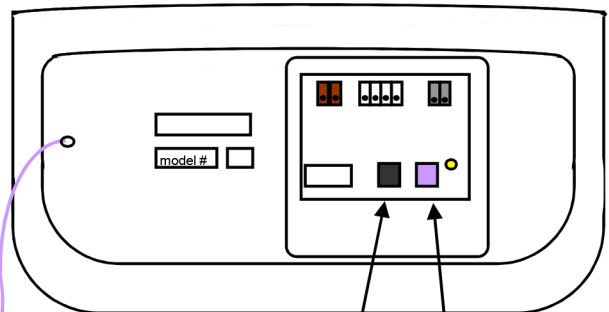

**SET LIMIT**  
**SMART BUTTON**

**PURPLE ANTENNA WIRE**